

CHAMBERLAIN™ **POWER DRIVE™**



- en** Instructions – Garage Door Operator Model GPD60, GPD65
- es** Instrucciones – Abridor de la puerta de garaje, Modelo GPD60, GPD65
- it** Istruzioni – Apriporta per garage Modello GPD60, GPD65
- pt** Instruções – Operador automático de porta, Modelo GPD60, GPD65

GPD60




GPD65



Chamberlain GmbH
Alfred-Nobel-Str. 4
D66793 Saarwellingen
www.chamberlain.de



es (+34) 902 88 33 79
it (+39) 02 303 52006
en (+44) 0800 317847
pt 707 785 454

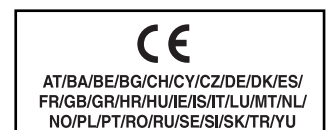

Start by Reading These Important Safety Rules



These safety alert symbols mean **WARNING** – a personal safety or property damage instruction.

Read these instructions carefully.

This garage door opener is designed and tested to offer reasonable safe service provided it is installed and operated in strict accordance with the following safety rules.

Failure to comply with the following instructions may result in serious personal injury or property damage.

WARNING: If your garage has no service entrance door, an Outside Quick Release must be installed. This accessory allows manual operation of the garage door from outside in case of power failure.

	Keep garage door balanced. Sticking or binding doors must be repaired. Garage doors, door springs, cables, pulleys, brackets and their hardware are under extreme tension and can cause serious personal injury. Do not attempt to loosen, move or adjust them. Call for garage door service.		Fasten the child warning label adjacent to the lighted door control button as a reminder of safe operating procedures.
	Do not wear rings, watches or loose clothing while installing or servicing a garage door opener.		Disengage all existing garage door locks to avoid damage to garage door.
	To avoid serious personal injury from entanglement, remove all ropes connected to the garage door before installing the door opener.		Any door control buttons (if installed) MUST be located where the garage door is visible, but out of the reach of children. Do not allow children to operate push button(s) or remote control(s). Serious personal injury from a closing garage door may result from misuse of the opener.
	Installation and wiring must be in compliance with your local building and electrical codes. This is a class 2 double insulated product, connection to earth is not required or provided.		Activate opener ONLY when the door is in full view, free of obstructions and opener is properly adjusted. No one should enter or leave the garage while the door is in motion. Do not allow children to play near the door.
	Lightweight doors of fiberglass, aluminum or steel must be substantially reinforced to avoid door damage. The best solution is to check with your garage door manufacturer for an opener installation reinforcement kit.		Use manual release only to disengage the trolley and, if possible, ONLY when the door is closed. Do not use the red handle to pull the door open or closed.
	The safety reverse system test is very important. Your garage door MUST reverse on contact with a 40mm obstacle placed on the floor. Failure to properly adjust the opener may result in serious personal injury from a closing garage door. Repeat the test once a month and make any needed adjustments.		Disconnect electric power to the garage door opener before making repairs or removing covers.
	This unit should not be installed in a damp or wet space.		This product is provided with a transformer and power supply cord of special design which, if damaged, MUST be replaced by a transformer from your local Chamberlain Anz distributor and fitted by a specialist.
	Door must not extend over a public byway during operation.		

SAVE THESE INSTRUCTIONS

1 Before You Begin

This operator is suitable for sectional doors.

1. Look at the wall or ceiling above the garage door. The header bracket **MUST** be securely fastened to structural supports.
2. Do you have a finished ceiling in your garage? If so, a support bracket and additional fastening hardware (not supplied) may be required.
3. Do you have an access door in addition to the garage door? If not, an Outside Quick Release Accessory is required.

2 Tools Required for Installation

3 Hardware Provided

ASSEMBLY HARDWARE

- | | | | |
|-----------------------|-----|-------------------|-----|
| 1. Square Head Screws | (2) | 4. Pin | (1) |
| 2. 8mm Carriage Bolt | (1) | 5. 8mm Lock Nut | (1) |
| 3. Cable Pulley | (1) | 6. Pulley Bracket | (1) |

INSTALLATION HARDWARE

- | | | | |
|---------------------|-----|-----------------------|------|
| 7. 6mm Nut | (5) | 15. Clevis Pins | (2) |
| 8. Concrete Anchor | (4) | 16. Ring Fastener | (4) |
| 9. 6mm Lag Bolt | (4) | 17. Flat Washer | (1) |
| 10. Clevis Pins | (2) | 18. Anchor | (2) |
| 11. 6x25mm Hex Bolt | (2) | 19. Insulated Staples | (10) |
| 12. Wire Clips | (3) | 20. 6x12mm Hex Bolt | (1) |
| 13. Hex Screws | (2) | | |
| 14. C-rail Bracket | (1) | | |

4 Completed Installation

As you proceed with the assembly, installation and adjustment procedures in this manual, you may find it helpful to refer back to this illustration of a completed installation.

- | | |
|--------------------------|----------------------------------|
| (1) Cable Pulley Bracket | (8) Light Lens |
| (2) Trolley | (9) Manual Release Rope & Handle |
| (3) Chain/Cable Assembly | (10) Door Arm |
| (4) Rail | (11) Door Bracket |
| (5) Hanging Bracket | (12) Header Bracket |
| (6) Power Cord | |
| (7) Opener | |

ASSEMBLY SECTION

5 Assemble Rail

Place Rail pieces (1) on a flat surface for assembly. Take special note of the raised line on the Rail pieces (4) these lines MUST line up in order for the Rail to fit together properly. All four Rail sections are interchangeable. Slide Rail Braces (2) into slots on the sides of Rail. Make sure small tabs on Rail Braces (3) are up against top lip of Rail. Connect Rail by sliding other end of braces into next Rail. Be sure the raised lines that run down Rail sections (4) line up. Tap Rail assembly (5) on a piece of wood (6) until Rail sections are flush. Repeat for final Rail section.

Reinforcement of rail (GPD65)

Install C-rail clamp when clearance between rail and ceiling exceeds 60mm.

Install the C-rail clamp (1) with bolt (2) and nut (3) included at position shown. (fig.5A)

Position C-rail clamp on the joint of the first and second rail section from the door closed position and tighten screw.

Make sure the C-rail clamp is located exactly over the joint of both rail sections. **The clamp is for additional reinforcement of the rail and not required when headroom clearance is less than 60mm.**

6 Assemble Cable Pulley Bracket

Insert Carriage Bolt (1) through square hole in Cable Pulley Bracket (4). Remove Chain/Cable assembly (3) from carton. Wrap Cable around Cable Pulley (2) and insert Pulley into Bracket (**NOTE: Make sure the Bracket is assembled in position shown**). Slide pin (5) through holes in Cable Pulley Bracket and Cable Pulley. **NOTE: Trolley with Magnet (6) MUST be installed in the position shown.**

7 Insert Chain/Cable into Rail

Slide Cable Pulley Bracket (1) into Rail assembly (3), be sure to insert Cable Pulley Bracket as shown. Push Cable Pulley Bracket toward front of Rail and slide Inner Trolley (2) into Rail assembly. Magnet (4) MUST be installed in position shown or unit will not function properly.

8 Attach Trolley to Rail

Turn Rail assembly over. Slide Outer Trolley (1) into Rail assembly (2), be sure the end with Door Arm Hole (3) is heading in direction of door (4). Slide Outer Trolley down Rail until it engages with Inner Trolley.

9 Attach Rail to Unit

Turn Rail assembly over. Wrap Chain around Drive Sprocket (1). Slide Rail assembly (2) toward unit and into slots on top of unit.

Attach C-Bracket (3) on rail and secure with screws (4) as shown. Push Cable Pulley Bracket forward making Chain tight on sprocket. Chain MUST engage teeth on Drive Sprocket.

10 Attach Rail End Bracket

Turn Rail and Unit assembly over. Slide Cable Pulley Bracket (2) toward front end of Rail (3). Be careful Chain does not come off Drive Sprocket on unit or become twisted. Slide Carriage Bolt (5) into Rail End Bracket (1). Secure with Lock Nut (4) and Washer (6). Tighten Nut until Chain does not droop below rail. Do NOT over tighten.

ASSEMBLY OF YOUR OPENER IS NOW COMPLETE.

INSTALLATION SECTION

Wear protective goggles when working overhead to protect your eyes from injury. Disengage all existing garage door locks to avoid damage to garage door. To avoid serious personal injury from entanglement, remove all ropes connected to garage door before installing opener.

11 Find Center of Garage

Mark center of door (1). Extend line onto ceiling (2).

12 Install the Header Bracket

NOTE: Refer to vertical center and horizontal lines created in step 11 for proper placement of header bracket.

A. Wall Mount: Center the header bracket (1) on the vertical center line (2) with the bottom edge of the header bracket on the horizontal line (4) (with the arrow pointing toward the ceiling). Mark all of the header bracket holes (5). Drill 4,5 mm (3/16") pilot holes and fasten the header bracket with wood screws (3).

B. Ceiling Mount: Extend vertical center line (2) onto the ceiling. Center the header bracket (1) on the vertical mark no more than 150 mm (6") from the wall. Make sure the arrow is pointing toward the opener. Mark all of the header bracket holes (5). Drill 4,5 mm (3/16") pilot holes and fasten the header bracket with wood screws (3). For concrete ceiling mount, use concrete anchors (6) provided.

Clearance between highest point of travel and Rail should not exceed 50mm and can be zero when clearance between door and ceiling is only 30mm.

13 Attach Rail to Header Bracket

Position opener on garage floor below the header bracket. Use packing material to protect the cover. Raise rail until holes in the header sleeve and holes in the header bracket align. Join with clevis pin (1). Insert ring fastener (2) to secure.

NOTE: To enable the rail to clear sectional door springs, it may be necessary to lift opener onto a temporary support. The opener must either be secured to a support or held firmly in place by another person.

14 Hang Opener

Bend Hanging Brackets (1) so they are flat against ceiling. Measure distance from Header Bracket to Ceiling Mounting Bracket Bolts. Mark length on ceiling starting at the Header Wall, along this point is where the unit will be mounted. Lift door to full open position, rest opener on door. Insert Square Head Screws (A) into Rail assembly (B) approximately 120mm from end of Rail near motor unit. Slide Hanging Brackets on to Square Head Screws and secure Brackets with Nuts (5). In this process the Square Head Screws hook into slots on the sides of rail. (C)

For concrete ceilings, drill 8mm pilot holes into ceiling and insert Concrete Anchors (2). Secure Hanging Brackets to ceiling with Lag Screws (3). For wood ceilings, drill 4mm pilot holes and secure with Lag Screws (3).

Optional: A second set of hanging brackets is recommended when door is very heavy. The hanging brackets should be located in the first third to the center of the rail from the front or at the location the garage door opener lifts the rail upwards the most during the travel.

15 Fasten Door Bracket

Sectional and One-Piece Door Installation Procedure:

Door bracket (1) has left and right side fastening holes. If your installation requires top and bottom fastening holes use both the door bracket and door bracket plate (2) as shown.

- Center door bracket (with or without door bracket plate, as required) at the top inside face of door as shown. Mark holes.
 - Standard Sectional or One-piece doors:** locate bracket at inside face of the door.
 - Sectional doors with two horizontal roller channels:** 150 - 250mm below the top of the door.
- A. Sheet metal doors**
Fasten with wood screws (4).
- B. One-piece door optional**
Fasten with wood screws (4).

16 Connect Door Arm to Trolley

- Preferred Installation:**
Disconnect Trolley by pulling on the red handle and slide towards door. With door closed connect Straight Door Arm (5) to Trolley (4) with Clevis Pin (6), secure with Ring Fastener (7). Connect Curved Door Arm (2) to Door Bracket with Clevis Pin (6) Secure with Ring Fastener (7). Align Straight and Curved Door Arms with a 2 hole overlap connect with Bolt (3), secure with Nut (1), If Straight Door Arm (5) is too long, cut the end of the Door Arm.
- Where extra travel distance is required:
With door closed connect Curved Door Arm (2) to Door Bracket with Clevis Pin (6), secure with Ring Fastener (7). Lift Curved Door Arm (2) to meet Trolley, connect door arm to Trolley with Clevis Pin (6), secure with Ring Fastener (7).

Connect Electric Power

To avoid installation difficulties, do not run the garage door opener until instructed to do so. Plug the opener into electric outlets as specified by local wiring codes. The opener light will turn on when power is connected and remain on for 2-1/2 minutes.

17 Attach Limit Switches

NOTE: The limits must be installed as shown. If installed incorrectly the unit will not function properly.

Close garage door by hand. Determine the position of the Close Limit Switch (1) (Long wire) by aligning the center of trolley and the center of the Limit Switch. The Limit Switches are actuated by a magnet in the Inner Trolley. Insert bottom tab (5) of Limit Switch (1) into bottom lip of Rail (7). Insert top tab (4) under top lip of Rail (6). Lift limit assembly against top lip of Rail and tighten screw (8) to secure Close Limit Switch. Open garage door by hand to the full open position. Pull red handle to open door past Inner Trolley. Determine the position of the Open Limit Switch (3) (Short Wire) by aligning the center of the Trolley and the center of the Limit Switch. Insert bottom tab (5) of Limit Switch (1) into bottom lip of rail (7). Insert top tab (4) under top lip of rail (6). Lift limit assembly against top lip of rail and tighten screw (8) to secure Open Limit Switch. Insert wires for Limit Switch (9) into top channel of Rail (10). Secure wires with wire clip. the wires must be secured so they do not interfere with the travel of the Trolley. Activate remote, the opener will operate and reconnect to the door automatically. Run opener 2 full travel cycles. If the door reverses in mid travel go to Setting the Force Section. Adjust Limit Switches as necessary to fully open and close the door without reversing.

18 Setting the Force

The Force is programmed to operate most doors, however, if Limits are not able to be set, or the door reverses during normal operation follow this procedure: Locate the Program Button (1) on the left side panel of unit (2). Push the Program Button twice to enter unit into Auto-Force Adjustment Mode. The green LED will flash slowly. Activate unit with remote and run the unit to the Open Limit. Activate unit again to run the unit to the Closed Limit. The door must travel through a complete cycle up and down in order for the Force to be set properly. If the unit stops before it reaches the Open or Close Limit repeat the process. The green LED will stop flashing when the Force has been learned.

19 Test the Safety Reverse System

The safety reverse system test is important. Garage door must reverse on contact with a 40mm obstacle laid flat on the floor. Failure to properly adjust opener may result in serious personal injury from a closing garage door. Repeat test once a month and adjust as needed.

Procedure: Place a 40mm obstacle (1) laid flat on the floor under the garage door. Operate the door in the **down** direction. The door **must** reverse on the obstruction. If the door **stops** on the obstruction, it is not traveling far enough in the **down** direction. Move Close Limit closer to door.

When the door reverses on the 40mm obstacle, remove the obstruction and run the opener through a complete travel cycle. Door **must not** reverse in closed position. If it does, adjust Limit and repeat safety reverse test.

Place 20kg at the center of the door and ensure that the door will not move up more than 500mm.

SAVE THESE INSTRUCTIONS

20 Program Remotes

Activate the opener only when door is in full view, free of obstruction and properly adjusted. No one should enter or leave garage while door is in motion.

Your garage door opener receiver and Remote Control Transmitter are set to a matching code. If you purchase additional Remote Controls, the garage door opener must be programmed to accept the new Remote code.

To program receiver to match additional Remote Control codes:

1. Press and release the program button on the side of the unit (1). The green LED will glow steadily for 30 seconds.
2. Within 30 seconds press and hold the button on the hand-held Remote (2).
3. Release the button when the motor unit light blinks. It has learned the code. If the light bulb is not installed, two clicks will be heard.

To erase all codes from motor unit memory or to deactivate any unwanted Remote, first erase all codes:

Press and hold the program button (1) on motor unit until the learn indicator light goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each Remote or Keyless Entry you wish to use.

21 Replace Light Bulb

Replace light bulb (1) with a 21 watt maximum light bulb. Insert bulb into socket as shown. The light will turn on and remain lit for 2 1/2 minutes when power is connected. After 2 1/2 minutes it will turn off.

Operation Of Your Opener

Your opener can be activated by any of the following devices:

- The Remote Control Transmitter. Hold the push button down until the door starts to move.
- The Lighted Door Control Button (if you have installed this accessory). Hold the button down until door starts to move.
- The Outside Keylock or Keyless Entry System (if you have installed either of these accessories).

Opening the Door Manually:

Door should be fully closed if possible. Weak or broken springs could allow an open door to fall rapidly. **Property damage or serious personal injury could result.**

The door can be opened manually by pulling the release handle down. To reconnect the door, activate the unit.

Do not use the manual release handle to pull the door open or closed.

When the Opener is Activated by Remote Control or Door Control Button:

1. If fully open, the door will close.
2. If closed, the door will open.
3. If opening or closing, the door will stop.
4. If partially open, the door will move in the opposite direction of last travel.
5. If an obstruction is encountered while closing, the door will reverse to the open position.
6. If an obstruction is encountered while opening, the door will reverse for 1 second.
7. The optional Protector System™ uses an invisible beam which, when broken by an obstruction, causes a closing door to open and prevents an open door from closing. It is **STRONGLY RECOMMENDED** for homeowners with young children.

Allow a 15 minute cooling period after 5 continuous operations of the opener.

The opener light will turn on: 1. when opener is initially plugged in; 2. when the power is interrupted; 3. when the opener is activated.

The light turns off automatically after 2-1/2 minutes. Bulb size is 21 Watts maximum.

Care Of Your Opener

When properly installed, opener will provide high performance with a minimum of maintenance. The opener does not require additional lubrication.

Limit and Force Adjustments: These adjustments must be checked and properly set when opener is installed. Only a screwdriver is required to adjust the limits. Weather conditions may cause some minor changes in the door operation, requiring some re-adjustments, particularly during the first year of operation. Refer to the Limit and Force Adjustments on page 2. Follow the instructions carefully and **repeat the safety reverse test after any adjustment.**

Remote Control Transmitter: Additional Remotes can be purchased at any time for use in all vehicles using garage. Refer to Accessories. The receiver must be programmed to operate with any new Remote.

Remote Control Battery: The lithium batteries should produce power for up to 5 years. If transmission range lessens, replace battery.

To Change Battery: Insert batteries positive side up. To replace cover, snap shut along both sides. Do not dispose of the old battery with household waste. Take batteries to a proper disposal center.

Maintenance Of Your Opener

Once a Month:

- Repeat safety reverse test. Make any necessary adjustments.
- Manually operate door. If it is unbalanced or binding, call for professional garage door service.
- Check to be sure door opens and closes fully. Adjust Limits and/or Force if necessary.

Twice a Year:

- Check chain tension. Disconnect Trolley first. Adjust if necessary.

Once a Year:

Oil door roller, bearings and hinges. The opener does not require additional lubrication. Do not grease the door tracks.

HAVING A PROBLEM?

1. Opener doesn't operate from remote:

- Does the opener have electric power? Plug lamp into outlet. If it doesn't light, check the fuse box or the circuit breaker. (Some outlets are controlled by a wall switch.)
- Have you disengaged all door locks? Review installation instruction warning on page 1.
- Try a new battery.
- If you have two or more remotes and only one operates, review receiver programming procedures in Step 21.
- Is there a build-up of ice or snow under door? The door may be frozen to ground. Remove any obstruction.
- The garage door spring may be broken. Have it professionally replaced.

2. Remote has short range:

- Is battery installed? Try a new one.
- Change the location of the remote control in the car.
- The metal garage door, foil-backed insulation or metal siding will reduce the transmission range.

3. Door reverses for no apparent reason and opener lights don't blink:

- Is something obstruction the door? Pull Manual Release Handle. Operate door manually. If it is unbalance or binding, call for professional garage door service.
- Reprogram the Force.
- Clear any ice or snow from garage floor area where garage door closes.
- If door reverses in fully closed position, adjust the Close Limit.

Repeat safety reverse test after adjustment is complete.

The need for occasional adjustment of the Limit positions is normal. Weather conditions in particular can affect door travel.

4. Door reverses for no apparent reason and door control button light blinks for 5 seconds after reversing:

- Check The Protector System™ (if you have installed this accessory). If the light is blinking, correct alignment.

5. The garage door opens and closes by itself:

- (Keypad or Code Switch transmitters only) Is there a neighbor with a garage door opener using the same code? Change your code.
- Make sure remote push button is not stuck in ON position.

6. Door does not close completely:

Adjust the Close Limit.

Repeat safety reverse test after any adjustment of door arm length, or Close Limit.

7. Door opens but won't close:

- Check The Protector System™ (if you have installed this accessory). If the light is blinking, correct alignment.

Repeat the safety reverse test after the adjustment is complete.

8. Opener light does not turn on:

Replace light bulb (21 Watts maximum).

9. Opener light does not turn off:

Defective logic board.

10. Opener motor hums briefly, then won't work:

- Garage door springs are broken. Close door and use Manual Release Rope and handle to disconnect Trolley. Open and close door manually. A properly balanced door will stay in any point of travel while being supported entirely by its springs. If it does not, call for a professional garage door service to correct the problem.
- If problem occurs on first operation at opener, door may be locked. Disable door lock.

11. Opener won't activate due to power failure:

- Pull Manual Release Handle to disconnect Trolley. Door can be opened and closed manually. The next time opener is activated, the Trolley will reconnect.
- The Outside Quick Release accessory 1702EMLM (if fitted) disconnects the Trolley from outside the garage in case of power failure.

12. Door reverses after the force adjustment was completed.

- Watch rail if it bends. If so, see point 13+14.
- Door is very heavy and/or in bad condition. Call for professional garage door service.

13. Rail bends a lot

- Use rail clamp. (see section 5A)
- Garage door is very heavy or in bad condition. Call for professional garage door service.

14. Do I need to use the rail clamp?

- Avoids bending of rail.

15. Opener light flares

- When the garage door is very heavy or isn't smooth running.
>> Normal

16. Opener overrides one of the limit switches

- Limit switches are not installed at the correct side of the rail and/or in the location. See "Attach Limit Switch"
- A functional test of the rail contact (cable) can be made with a simple household magnet.
- Check condition of cables for insulation damages
- Check if the magnet located inside the inner trolley is in place

22 Accessories

- (1) Model 84330EML Single-Function Remote Control
- (2) Model 84333EML 3-Function Remote Control
- (3) Model 84335EML 3-Function Mini Remote Control
- (4) Model 8747EML Keyless Entry System
- (5) Model 845EML Multi-Function Door Control Panel
- (6) Model 760EML Outside Keylock
- (7) Model 1702EML Outside Quick Release
- (8) Model 770EML The Protector System™
- (9) Model 1703EML The Chamberlain Arm™
- (10) Model 75EML Lighted Door Control Button
- (11) Model 1EML Door Handle Quick Release
- (12) Model 41EML 2 Position Key Switch

NOT SHOWN:

Model MDL100EML Mechanical Door Latch

WIRING INSTRUCTIONS FOR ACCESSORIES

Outside Keylock – To opener terminals: Red-1 and White-2
 Protector System™ – To opener terminals: White-3 and Grey-4
 Door Control Panel – To opener terminals: Red-1 and White-2

23 Wiring the Lighted Door Control Button (Optional)

Locate any Wall Mounted Door Control where the garage door is visible, away from door and door hardware, at a minimum height of 1.5m. fasten the child warning label on the wall near the Door Control.

There are 2 screw terminals (1) on the back of the Door Control (2). Strip about 6mm of insulation from bell wire (4). Separate wires enough to connect the white/red wire to terminal screw 1 and the white wire to terminal screw (1)

Lighted Door Control Button: Fasten to an inside garage wall with sheet metal screws (3) provided with Lighted Push Button. Drill 4mm holes and use anchors (6) if installing into drywall or concrete. A convenient place is beside the service door and out of reach of children.

Run the bell wire up the wall and across the ceiling to the garage door opener. Use insulated staples (5) to secure wire.

The opener Quick-Connect Terminals (7) are located in the recess next to the learn button on the left side panel. Insert bell wire into holes in the Quick Connect Terminals as follows: Red/White to Red and White to White.

Install Protector System™ (Optional) – (See accessories)

After opener has been installed and adjusted, The Protector System™ accessory can be installed. Instructions are included with this optional device.

The Protector System™ provides an additional measure of safety against a small child being caught under a garage door.

It uses an invisible beam which, when broken by an obstruction, causes a closing door to open and prevents an open door from closing and is *strongly recommended for homeowners with young children.*

24 Replacementparts

- 1. 041A5644 Trolley with chain/cable assy (GPD60)
- 001A6355-3 Trolley with chain/cable assy (GPD65)
- 2. 001A5690-35 Head only (GPD60)
- 001A5690-36 Head only (GPD65)
- 3. 001A5643-6 Hardwarebag
- 4. 012B0905 Door bracket
- 012B0906
- 5. 012C0908 Rail end bracket
- 6. 012C0788 Header bracket
- 7. 001B0911 C-rail clamp (GPD65)
- 8. 05765 Rail hardware
- 9. 183D0181-3 Rail parts (GPD65)
- 10. 041A5676 Rail parts (GPD60)
- 11. 041C0521-1 Limit switch (GPD60)
- 041A0521-2 Limit switch (GPD65)
- 12. 001A4166 Push button
- 13. 001B4494-1 Wire
- 14. 041A0079 Lightbulb

Specifications

Input Voltage 230 VAC 50Hz
 Max. Pull force 600N (GPD60), 650N (GPD65)
 Rated Power Input 85 Watts
 Rated Load 3.0 Nm
 Standby Power 9 Watts
 Max. Door Weight 60kg (GPD60), 80kg (GPD65)

Motor

Type 63:1 Worm Gear Reduction
 Volts 24VDC

Drive Mechanism

Length of Travel 2,3 m (GPD60), 2,5 m (GPD65)
 Travel Rate 8cm/sec
 Lamp 24V 21 Watts

Safety

Electronic Auto-Force Adjustment
 Electrical Thermal Fuse in Transformer
 Limit Adjustment Manual

Dimension

Length (Overall) 2,75 m (GPD0), 3,05 m (GPD65)
 Headroom Required 30mm
 Hanging Weight 9kg (GPD60), 9,5kg (GPD65)

Receiver Code Registers

Rolling Code 8
 Operating Frequency 433.92MHz

Declaration of Conformity



The undersigned, hereby declare that the equipment specified, and all accessories, conforms to the Directives and Standards stated.
 Model:.....GPD60/GPD65

2004/108/EC
 2006/95/EC
 1999/5/EC


EN55014-1 (2000), EN55014-2 (1997), EN61000-3-2 (2000), EN61000-3-3 (1995), EN 301 489-3 (V1.3.1), EN 300 220-3 (V1.1.1), EN60335-1 (1994), and EN60335-2-95 (2000)


Declaration of Incorporation

A power door operator, in combination with a Garage Door must be installed and maintained according to all the Manufacturer's instructions, to meet the provisions of EN12453, EN13241-1 and Machinery Directive, 98/37/EG.

Barbara P. Kelkhoff

  B. P. Kelkhoff
 Manager, Regulatory Affairs
 Chamberlain GmbH
 D-66793 Saarwellingen
 January, 2009







- de Abbildungen – Garagentorantriebe GPD60, GPD65
- fr Figures – Modèles GPD60, GPD65 de ouvre-porte de garage
- en Illustrations – Garage Door Operator Models GPD60, GPD65
- es Ilustraciones – Abridor de la puerta de garage, Modelo GPD60, GPD65
- it Illustrazioni – Apriporta per garage Modelli GPD60, GPD65
- nl Afbeeldingen – Modellen GPD60, GPD65 Garagedeuropener
- pt Instruções – Operador automático de porta, Modelo GPD60, GPD65

Chamberlain GmbH
Alfred-Nobel-Str. 4
D66793 Saarwellingen
www.chamberlain.de



- ic**
- de (+49) 06838-907-100
 - fr (+33) 03.87.95.39.28
 - nl (+31) 020.684.79.78
 - en (+44) 0800 317847
 - it (+39) 02 303 52006
 - es (+34) 902 88 33 79
 - pt 707 785 454

