



WIRELESS DOOR SENSOR INSTALLATION GUIDE

Read instructions carefully before beginning

Please make sure your garage door is closed before you start installation.

 
 
The GoGogate product and our wireless door sensors are meant to be used with garage door openers equipped with photo-eye safety sensors (manufactured after 1993). These sensors are normally found at the bottom of your garage door and avoid accidental closing of your garage door if an object or person is on the path of the door.

! TO PREVENT SERIOUS INJURY OR DEATH FROM MOVING GARAGE DOORS OR GATES:

- DO NOT let children use the GOGOGATE product and app without adult supervision.
- ONLY Operate your GOGOGATE device when you are in clear view of your garage or gate and you have verified that there are no objects obstructing the operation of the door. ALWAYS wait for garage door or gate to be completely closed.
- NEVER operate the remote access feature of your GoGoGate without ensuring that there is an adult physically present in front of the door or gate validating that it is safe to start the remote operation of your device


Step 1: Place your Sensors

WIRELESS DOOR SENSOR

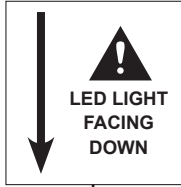

Always install your wireless door sensors with the garage doors in a closed position. Put the provided AAA battery into the sensor. A red light will blink if door is open/closed. Make sure led light is facing down.

 EXCLUSIVE FOR GARAGE DOORS

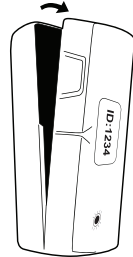

1

Open the sensor to include the provided battery.

 


2


Place the battery as per picture indications.

Note: write down and store in a safe location the 4 digit code located on the front of your sensor.

Attach your wireless sensors to your garage door as per drawing below.

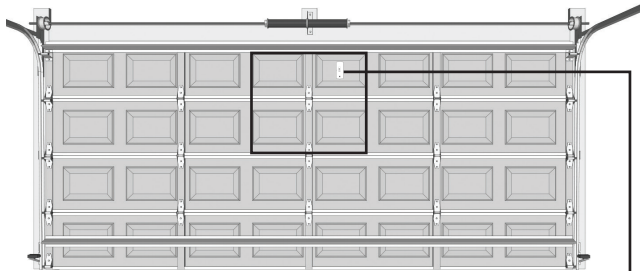

 Place the sensors on the upper part of your garage door wall.

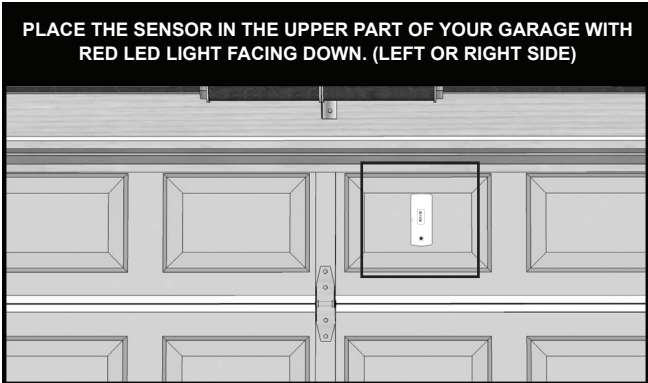

PLACE THE SENSOR IN THE UPPER PART OF YOUR GARAGE WITH RED LED LIGHT FACING DOWN. (LEFT OR RIGHT SIDE)

Step 2: Programming additional sensors to your GoGogate

If you have previously programmed your GoGoGate with one single wireless door sensor, you also have the option of adding additional garage doors to your GoGoGate via your REMOTE ACCESS web page.

STEP 01

STEP 02

STEP 03

STEP 04

 
Press "Find Gogogate" button while connected to your Wi-Fi to access GOGOGATE WEB PAGE

Input your default password: **admin**

Press the "Configuration" button

Add your wireless sensor ID and type a name for it Press "Update" button to save changes.

NOTE: After pressing update, your system will reboot for 40 sec. and your doors will show as "open". You will need to activate each door once or twice to re-sync them.

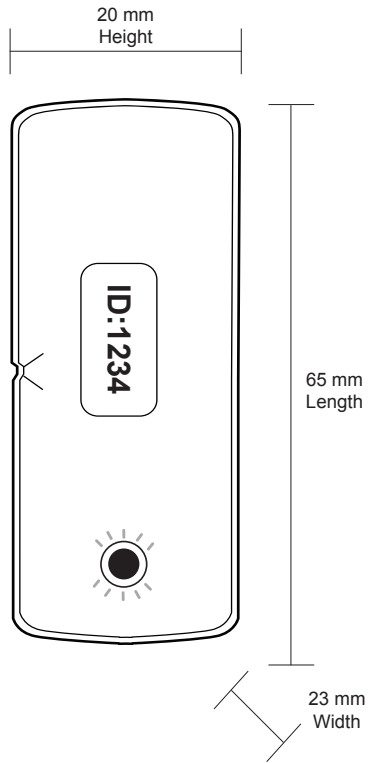

Sensor features:

- Remotely monitor if garage door has been opened or closed
- Receive push notifications and alerts remotely on your Smartphone
- Easy install tilt sensor with double sided tapes.
- Tilt switch broken when garage door opens. Sensor will be blinking red light.

FEATURES	MODEL GS-4T-RE/GGG
Frequency	433.92 Mhz
Range	50 m or 150 ft (open space)
Operating Temperature	Between 0° and 40° C
Battery type	AAA
Battery life span	2 years
Packaging	Clamshell
Certification	CE - FCC



Still having issues. No problem.

Download our user manual in our website www.gogogate.com or contact us at: support@gogogate.com