


# **Sliding Gate Operator**

## **User's Manual**

### **SL600AC(L)**

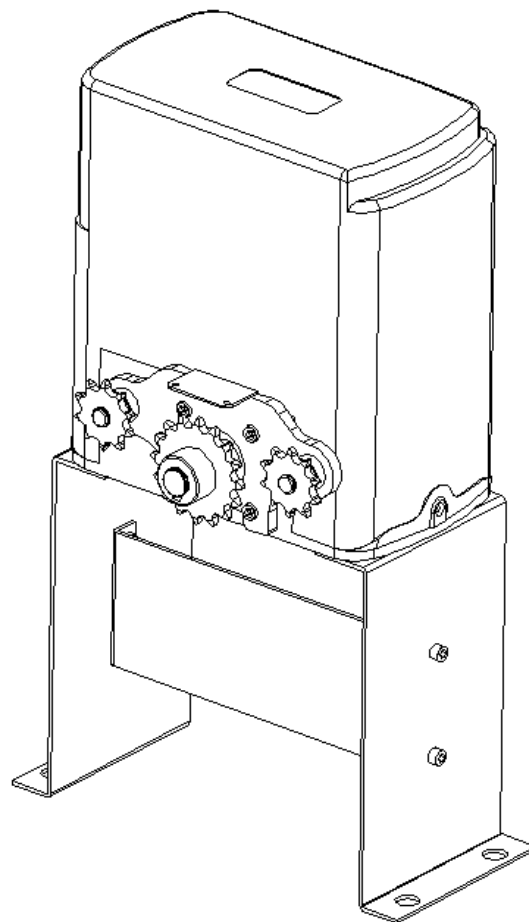

## 1. Products introduction

please read the instructions carefully before proceeding.

MCU is supplied to control the gate operator.

Keypad / single button interface.

Photo beam safety beam interface.

User can select Auto-close function.

Manual key release design for emergency purposes.

## 2. Important safety information

Carefully read and follow all safety precautions and warning before attempting to install and use this automatic gate operator.

Make sure the Power supply(AC220V or AC110V) of the gate operator is suitable for the power supply in your area.

## 3. Main technical parameters

Type	SL600AC (L)	SL600AC (L) U
Power supply	220V, 50Hz	110V, 60Hz
Motor speed	55rpm	66rpm
Rated output power of motor	200W	
Remote control operating distance	30m (Frequency: 433.92MHz)	
Remote control mode	Single button	
Output shaft height	48mm	
Max. gate weight	600Kg	
Output torque	16N · m	
Limit switch	Magnetic limit switch	
Noise	≤56dB	
Duty cycle	S2, 15 minutes	
<i>extra remote control</i>	25	
Environmental temperature	-20°C~+50°C	
<i>Gate Move speed</i>	12m/min	14 m/min

## 4. Mechanical Installation

The SL600AC (L) will handle gate weighting up to 600kg and up to 12m if the proper installation procedures have been followed.

The SL600AC (L) gate operator operates by forcing a drive rack by a drive gear. The entire configuration is shown in the diagram below. The gate operator must be installed on the inside of the gate.

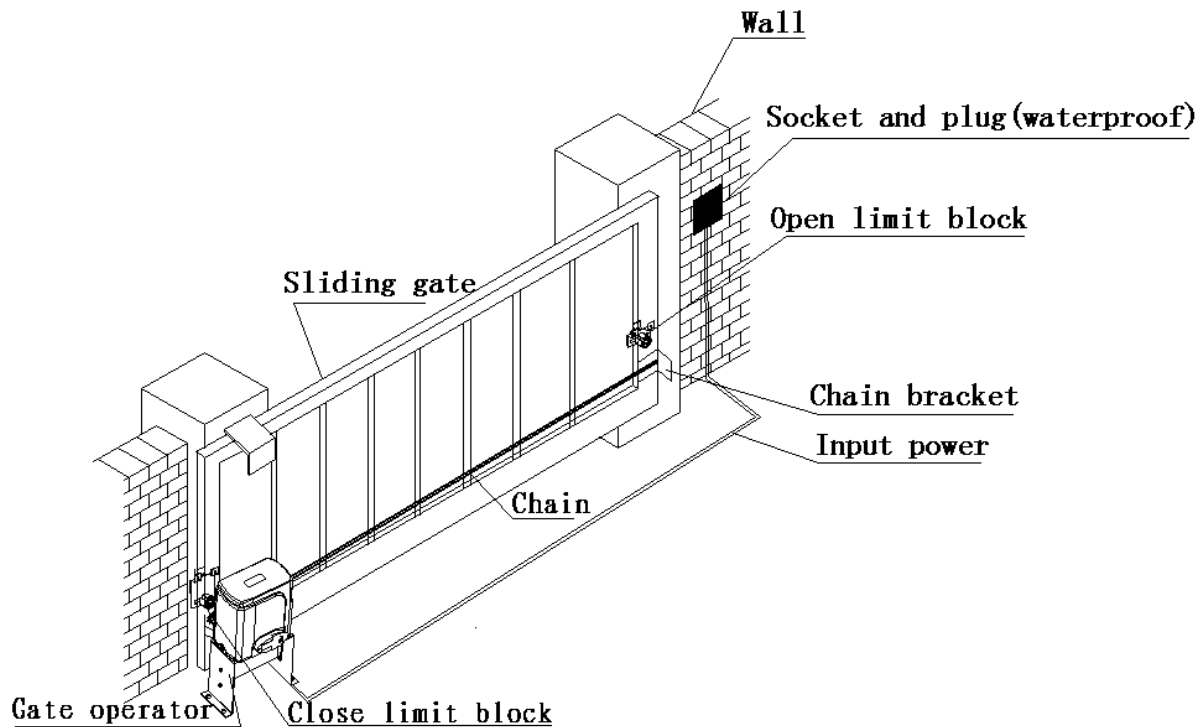


Fig.1

The SL600AC (L) Chain-driven Gate Operator operates by forcing a straight piece of chain through its chain box. This length of chain is extended between two chain brackets located at opposite ends of the gate. The entire configuration is shown in the pack list.

#### Gate preparation

Be sure the gate is properly installed and slides smoothly before installing the SL600AC (L) sliding gate operator. The gate must be plumb, level, and move freely.

#### Conduit

In order to protect the cable, use PVC conduit for low voltage power cable and control wires. Conduit must be preset into the concrete when it is poured. Wires within the conduit shall be located or protected so that no damage can result from contact with any rough or sharp part.

#### Concrete Pad

The base unit of the gate operator requires a concrete pad in order to maintain proper stability. The concrete pad should be approximately 24" (600mm) x 12" (300mm) x 18" (460mm) deep in order to provide for adequate operation.

Once the gate is mounted adequately, electrical power is available, and the concrete pad is poured, you are ready to proceed.

#### Anchors

You can use the anchors that are provided with the operator, 3 ¼ anchor bolts (4), anchors, washers, and nuts. These anchors must be set into the concrete when it is poured, or you can use wedge anchors (1/4" x 4").

#### **Operator Base**

Mount the gate operator base to the concrete pad. The distance between the gate and the base should be no more than 2 ½" (64mm). Verify that the operator is leveled properly.

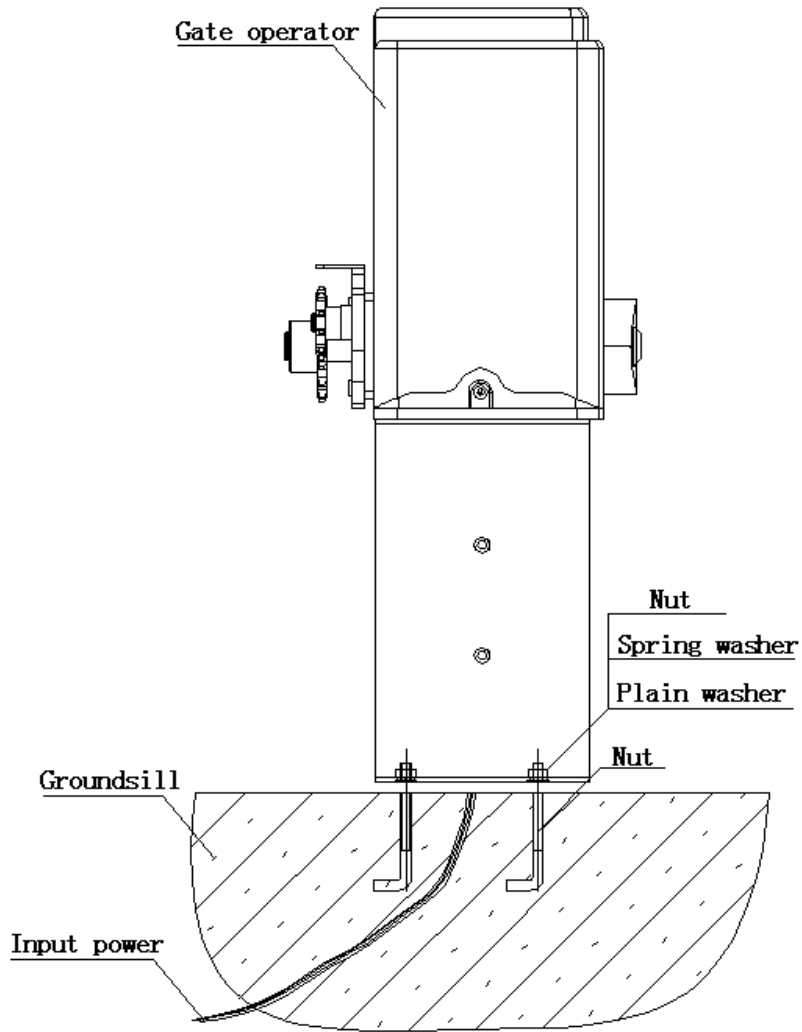


Fig.2

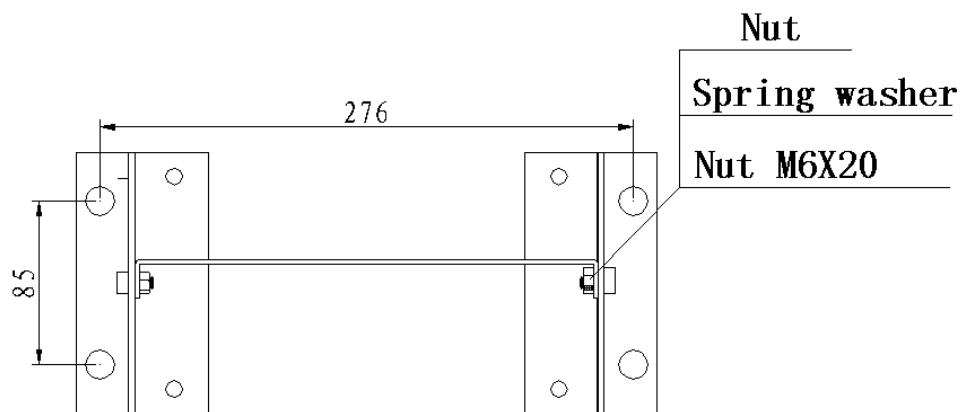


Fig.2A Operator base

Operator

Mount the gate operator to the base using (4) 2 ¾" (M8x70mm) #48 bolts and washers. Make sure there is no more than 1/8" (2mm) of space between the cover and the chain box. Check the operator and make sure it is

lined up with the gate.

Chain Brackets

Use the appropriate bolts to attach the chain bracket to the frame of the gate. If the gate is of square frame style, use the square bolts shown.

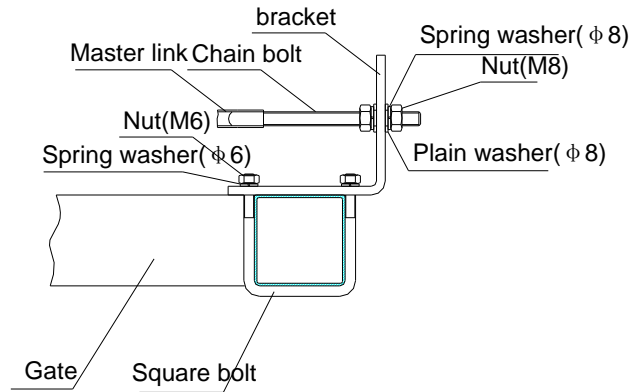


Fig.3

If the gate is of round frame style, use the round bolts shown.

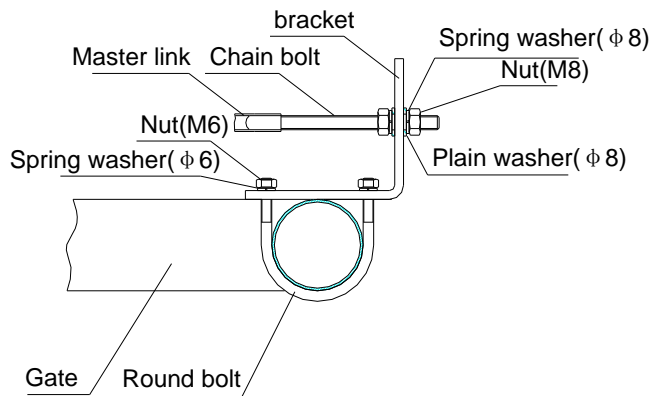


Fig.4

Chain

Close the gate and attach a chain bolt to the piece of chain that comes with the chain box using enclosure master links. Tighten the chain bolt to the bracket with washers and nuts. Pull the chain through the chain wheel box to the other chain bracket at the opposite end of the gate. Connect the other end of the chain and the chain bolt, and then tighten the chain bolt to the chain bracket. Thread up the chain by adjusting the chain bolt. Cut the chain to length if necessary. Make sure that the chain is perfectly aligned with the chain holes on the chain box. Tighten the chain by tightening the chain bolts at either end. See illustration below.

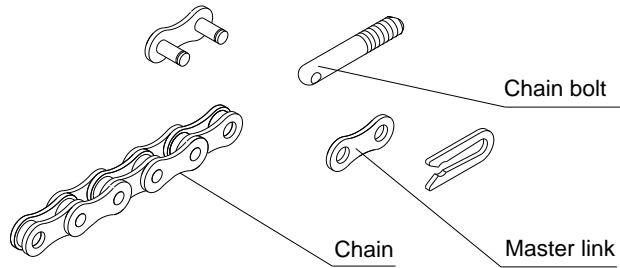
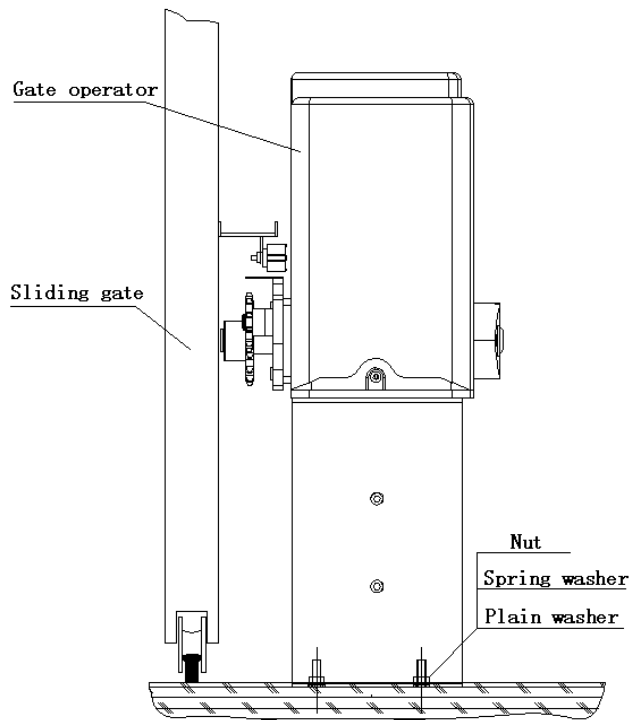


Fig.5

**5. Adjustment**

Magnetic limit switch

- To ensure safety, it is recommended to install limit switches at both ends of the gate to prevent the gate from sliding out of the rails. The rails must be installed horizontally.
- Install the limit block as shown in Fig.6. The magnetic of limit switch and blocks are used to control the position of the gate.
- Release the gear with the key and push the sliding gate manually to pre-determine the position, fix the block to the rack and lock the gear by push up the release bar. Moving the gate electrically, adjust the block to the proper position until the position of the opening and closing meet the requirement.



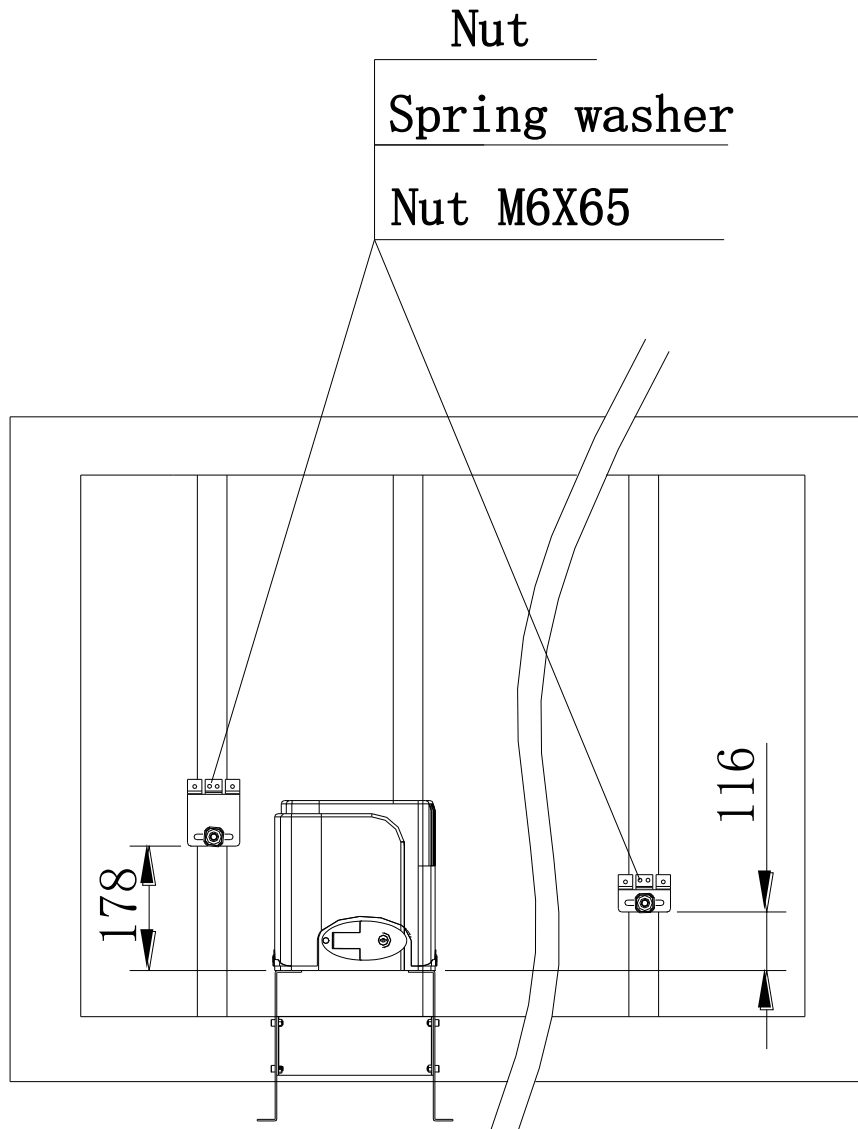


Fig.6

Manual operation

In case of power failure use key unlock the lock and pull down the release bar about 90 degree to open or close gate manually, use the release key as follow:

- Fit the supplied key in the lock.
- Turn the key and pull down the release bar about 90° to release the gear. (Note: Do not exceed 90°, be careful not to use too much force, otherwise the release bar will be damaged.)
- Open and close the gate manually.

Note: If the gate bumps the mounting post and cannot be electric opened, move the gate a few inches by hand, thus you can release the gate with pull the release bar, open and close the gate manually.


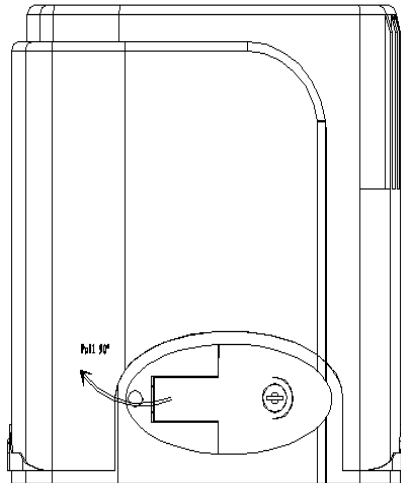


Fig.7

### 6. Wire Connecting

Make sure that the power is OFF before making any electrical connections.

Remove the cover, perform the wiring (See Fig.8 and wiring notes for control board) and replace the cover again.

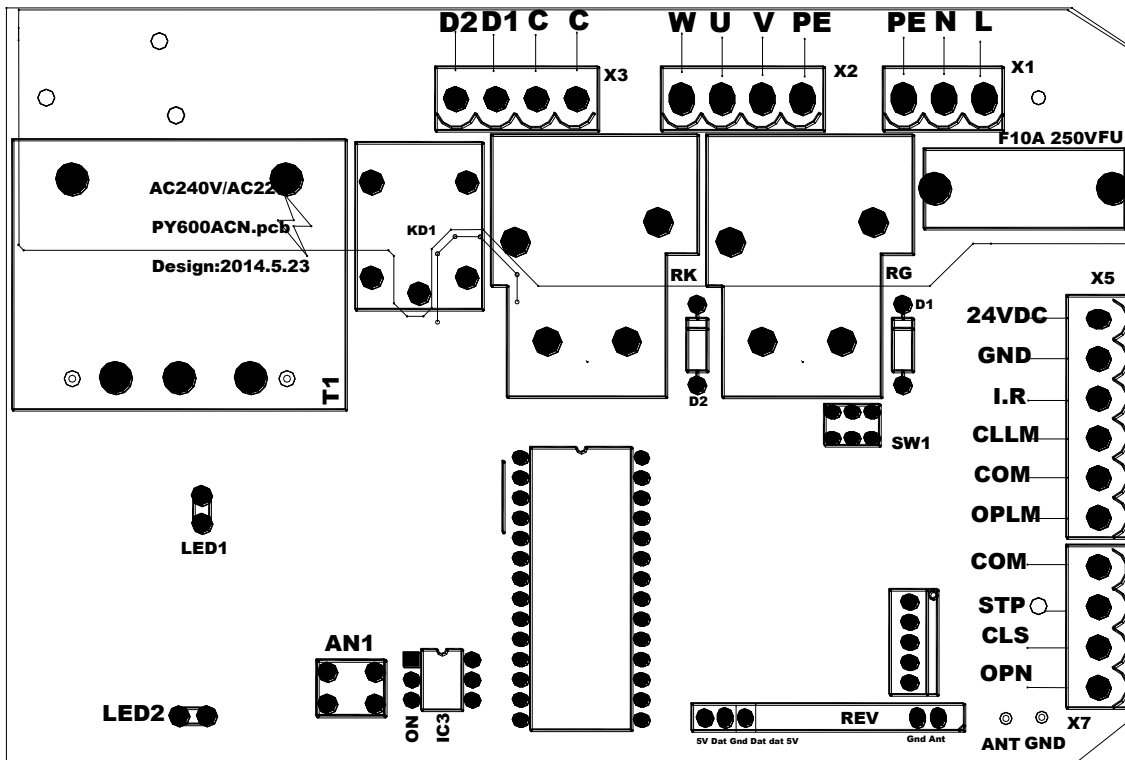

#### Wiring notes of control board


- a. Power Input(X1):E (Earth),L (Live),N (Neutral).  
 SL600AC: AC220V  
 SL600ACU:AC110V
- b. Caution light: connect caution light wire toD1 and D2(terminal X3)  
 SL600AC: AC220V



SL600ACU : AC110V

c. Output power supply: 24VDC, COM (COM), I.R. (N.C Infrared)

If the infrared beam is interrupted during closing, the gate will reverse and open immediately. The product is not factory equipped with an infrared device, the infrared output signal must be N.C.

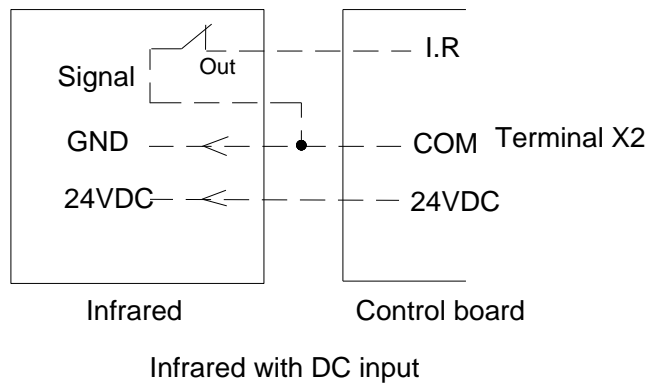


**Fig.9 infrared** Schematic diagram

d. Three-button switch / single-button switch (keypad): The SL600AC is equipped with interfaces for three-button switch and single-button switch (keypad).


To install the keypad attach one lead of your keypad to 'CLS' of terminal X4 and the other to the 'COM'. The keypad will function in single channel mode (the DIP switch 1 should be turn to OFF).

For three-button switch installation, use the terminals for multi-channel mode. Connect open wire of external button switch to 'OPN' of terminal X4, connect close wire of switch to 'CLS', connect stop wire of switch to 'STP', connect common wire of switch to 'COM'.

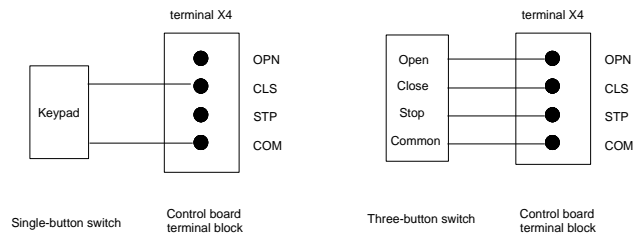

**Fig.10**

Motor and capacitor (Terminal X2, X3): V (com), U (Positive direction), W (Opposite direction), E (grounding), C (capacitor)

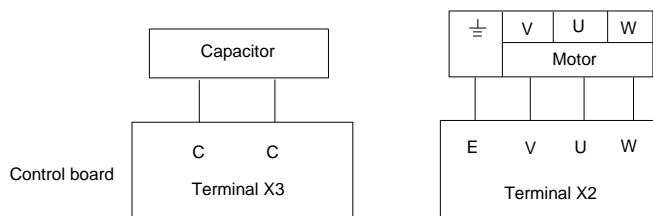

**Fig.11**

**7. Tuning and operation**

Remote control

- The remote control works in a single channel mode. It has four buttons. See Fig.12 Remote transmitter. The function of button 1, button 2, button 3 and button 4 are the same. With each press of the remote control button which has been programmed, the gate will close, stop, open or stop cycle.
- You can program/learn button 1, button 2, button 3 individually. You also can program/learn two buttons or three buttons together, but you need repeat the program/learn process if you want to use more than one button.

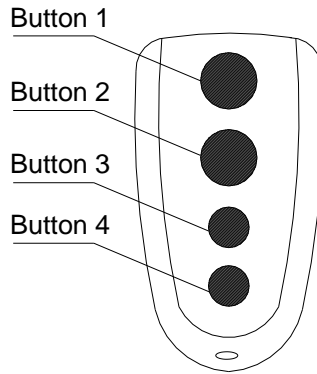


Fig.12 Remote transmitter

- Adding extra remote controls (Learn): Remove the cover, press the learn button 'AN1' (Fig.8), then the 'LED2' (Fig.8) will be on and turn off, then press the remote control button which you want to use, the 'LED2' will turn on about 2 seconds and then turn off again. The learning process is finished. Up to 25 remote controls may be used.
- Erase remote controls: To erase all existing remote controls, press and hold learn button 'AN1', the 'LED2' turns on, release the button once the 'LED2' turns off. This indicates that all the remote controls have been erased completely.
- **Note:** Press the 'OPEN' button of external button switch or remote control button which has been learned, the gate will open, the motor rotates clockwise, and the 'LED2' is turns on. The output voltage between 'D1 and D2' (terminal X3) is AC220V/110V, the voltage between 'V' and 'U' is AC220V/110V. Press 'STOP' button or the same remote control button, the gate stops running. And the 'LED2' is turns off. Then press 'CLOSE' button or the same remote control button again, the gate will close, the motor rotates anticlockwise, and the 'LED2' is turns on. The output voltage between 'D1 and D2' (terminal X3) is AC220V/110V, the voltage between 'V' and 'W' is AC220V/110V. Press the 'STOP' button or the same remote control button, the gate stops running. And the 'LED2' is turns off.
- Verify open direction: If the gate does not move in the desired direction, then you will need to reverse the motor operating direction, open the black plastic cover, you can do this by exchanging wires 'U' and 'W', 'OPLT' and 'CLLT'.

**8. Programming Process**

Table of the DIP-switch

Position	DIP-switch	Function SET
1	ON	Three-button switch
	OFF	Single-button switch (the CLS and COM), OPN and COM is "open door" function also.
2	ON	When the 2 and 3 all ON, the Controller

	OFF	haven't Auto-close function. When the 2 ON and the 3 is OFF, auto-close time is near 20 Sec. when the 2 OFF and the 3 is ON auto-close time is near 40 sec. when the 2 and the 3 is all in position, the auto-close time is near 60 sec.
--	-----	--

**Note:**

- (1) **You must follow the operating instruction as above, any wrong operation is not allowed during setting. If your device responds to your requested function correctly, you have set the function successfully, otherwise repeat the above setup instruction until your device responds to your expected function.**
- (2) **If the gate can not be moved, please check whether the gate is obstructed or the gate is too weight.**

**Activities Covered in this section**

- **Remote transmitter:** With each press of the button, the gate will close, stop, open or stop cycle. **(Single-button mode)**
- **Three-button mode external button switch (not supply):** press 'OPEN' button, the gate opens. Press 'STOP' button, the gate stops. Press 'CLOSE' button, the gate closes.
- **Single-button mode external button switch / keypad (not supply):** With each press of the button, the gate will close, stop, open or stop cycle.
- **Auto-close function:** This feature can be selected to make the gate stay open for some seconds before it automatically closes. The auto-close time can be adjusted to between 15, 30 and 45 seconds.
- **Safe guard (Infrared photocell):** If infrared beam is interrupted during closing, the gate will reverse and go open immediately. This feature will not function if the gate is in fully opened and closed positions or during opening.
- **Open priority:** The gate will return to open if press 'OPEN' button of external button switch during closing.
- **Limit switch:** The switch is used to accurately stop the gate in the opened and closed positions.  
If the gate stops at opened position when the limit switch is reached, the gate will not move if you press 'OPEN' button.  
If the gate stops at closed position when the limit switch is reached, the gate will not move if you press 'CLOSE' button.
- The device is installed with a thermal protector, the thermal protector will switch off the motor automatically in case of the temperature is higher than 120°C and switch on the motor automatically when the temperature is lower than 85°C ± 5 °C.

**9. Maintenance**

- Check the door once a month. The door should be carefully checked for balance. The door must be in good working order.
- We suggest for safety reasons, photocells be used on all gates.
- Disconnect from mains supply before replacing bulb.
- Be sure to read the entire manual before attempting to perform any installation or service to the door operator.
- Our company reserves the right to change the design and specification without prior notification.

**10. Troubleshooting**

Trouble	Possible causes	Solutions
The door fails to open and close. LED display	1. Power is OFF 2. Fuse burn	1. Make sure that power is ON. 2. Replace fuse.

does not light.		
The door can open fails to close.	<ol style="list-style-type: none"> <li>1. Infrared beam is obstructed.</li> <li>2. Infrared sensor function is enabling, but the sensor has not been installed.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove obstructions.</li> <li>2. Make sure the infrared sensor function is disabling.</li> </ol>
Remote transmitter does not work.	<ol style="list-style-type: none"> <li>1. Battery level may be low</li> <li>2. Transmitter code is lost</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace the battery inside the transmitter.</li> <li>2. Reprogram the transmitter.</li> </ol>
The transmitter operating distance is too short.	Battery level may be low.	Replace battery.

### 11. Packing list

After receiving the gate operator, you should make an unpack-inspection, in which you should check whether the product was damaged. If you have any problem please contact our dealer. You should find the following items in our standard packing:

No.	Item	Quantity
1	SL600AC (L) sliding gate operator	1
2	Transmitter	2
3	Release key	2
4	User's manual	1